

**Datenblatt zu Notebook Akku VIS-53-T60L**

Vistaport-Artikel-Nr. **VIS-53-T60L**  
Für Notebook-Marke **IBM / Lenovo**



Techn. Spezifikation **6 Cells, 11.1V, 5200mAh, Lilon**  
Anzahl Zellen **6 cells**  
Gewicht **350g**  
Garantie **18 months**  
Kann diese Original-Hersteller-Teile ersetzen **40Y6799, 42T4504, 42T4513, 42T4544, 42T4545, 42T4560, 42T4561, 42T4566, 42T4572, 42T4651, 42T5232, 42T5233, 42T5234, 42T5246, 43R9252, 92P1137, 92P1138, 92P1139, 92P1140, 92P1141, 92P1142, Battery 41+**

**Modelle**

IBM / Lenovo **ThinkPad R500 2713**  
IBM / Lenovo **ThinkPad R500 2714**  
IBM / Lenovo **ThinkPad R500 2715**  
IBM / Lenovo **ThinkPad R500 2716**  
IBM / Lenovo **ThinkPad R500 2717**  
IBM / Lenovo **ThinkPad R500 2718**  
IBM / Lenovo **ThinkPad R500 2719**  
IBM / Lenovo **ThinkPad R500 2720**  
IBM / Lenovo **ThinkPad R500 2731**  
IBM / Lenovo **ThinkPad R500 2732**  
IBM / Lenovo **ThinkPad R500 2733**  
IBM / Lenovo **ThinkPad R500 2734**  
IBM / Lenovo **ThinkPad R500 2735**  
IBM / Lenovo **ThinkPad R500 2736**  
IBM / Lenovo **ThinkPad R500 2737**  
IBM / Lenovo **ThinkPad R60 8942**  
IBM / Lenovo **ThinkPad R60 8943**

**Datenblatt zu Notebook Akku VIS-53-T60L**

IBM / Lenovo	<b>ThinkPad R60 8944</b>
IBM / Lenovo	<b>ThinkPad R60 8945</b>
IBM / Lenovo	<b>ThinkPad R60 8947</b>
IBM / Lenovo	<b>ThinkPad R60 9455</b>
IBM / Lenovo	<b>ThinkPad R60 9456</b>
IBM / Lenovo	<b>ThinkPad R60 9457</b>
IBM / Lenovo	<b>ThinkPad R60 9458</b>
IBM / Lenovo	<b>ThinkPad R60 9459</b>
IBM / Lenovo	<b>ThinkPad R60 9460</b>
IBM / Lenovo	<b>ThinkPad R60 9461</b>
IBM / Lenovo	<b>ThinkPad R60 9462</b>
IBM / Lenovo	<b>ThinkPad R60 9463</b>
IBM / Lenovo	<b>ThinkPad R60 9464</b>
IBM / Lenovo	<b>ThinkPad R60e 0656</b>
IBM / Lenovo	<b>ThinkPad R60e 0657</b>
IBM / Lenovo	<b>ThinkPad R60e 0658</b>
IBM / Lenovo	<b>ThinkPad R60e 0659</b>
IBM / Lenovo	<b>ThinkPad R60i 0657</b>
IBM / Lenovo	<b>ThinkPad R60i 9456</b>
IBM / Lenovo	<b>ThinkPad R60i 9461</b>
IBM / Lenovo	<b>ThinkPad R61 7642</b>
IBM / Lenovo	<b>ThinkPad R61 7644</b>
IBM / Lenovo	<b>ThinkPad R61 8914</b>
IBM / Lenovo	<b>ThinkPad R61 8918</b>
IBM / Lenovo	<b>ThinkPad R61 8919</b>
IBM / Lenovo	<b>ThinkPad R61 8920</b>
IBM / Lenovo	<b>ThinkPad R61 8927</b>
IBM / Lenovo	<b>ThinkPad R61 8928</b>
IBM / Lenovo	<b>ThinkPad R61 8929</b>
IBM / Lenovo	<b>ThinkPad R61 8930</b>
IBM / Lenovo	<b>ThinkPad R61 8932</b>
IBM / Lenovo	<b>ThinkPad R61 8933</b>

## Datenblatt zu Notebook Akku VIS-53-T60L

IBM / Lenovo	<b>ThinkPad R61 8934</b>
IBM / Lenovo	<b>ThinkPad R61 8935</b>
IBM / Lenovo	<b>ThinkPad R61 8936</b>
IBM / Lenovo	<b>ThinkPad R61 8937</b>
IBM / Lenovo	<b>ThinkPad R61 8942</b>
IBM / Lenovo	<b>ThinkPad R61 8943</b>
IBM / Lenovo	<b>ThinkPad R61 8944</b>
IBM / Lenovo	<b>ThinkPad R61 8945</b>
IBM / Lenovo	<b>ThinkPad R61 8947</b>
IBM / Lenovo	<b>ThinkPad R61 8948</b>
IBM / Lenovo	<b>ThinkPad R61 8949</b>
IBM / Lenovo	<b>ThinkPad R61e 7649</b>
IBM / Lenovo	<b>ThinkPad R61e 7650</b>
IBM / Lenovo	<b>ThinkPad R61e 7657</b>
IBM / Lenovo	<b>ThinkPad R61i 7650</b>
IBM / Lenovo	<b>ThinkPad R61i 7732</b>
IBM / Lenovo	<b>ThinkPad R61i 8918</b>
IBM / Lenovo	<b>ThinkPad R61i 8932</b>
IBM / Lenovo	<b>ThinkPad R61i 8934</b>
IBM / Lenovo	<b>ThinkPad R61i 8943</b>
IBM / Lenovo	<b>ThinkPad T500 2055</b>
IBM / Lenovo	<b>ThinkPad T500 2056</b>
IBM / Lenovo	<b>ThinkPad T500 2081</b>
IBM / Lenovo	<b>ThinkPad T500 2082</b>
IBM / Lenovo	<b>ThinkPad T500 2083</b>
IBM / Lenovo	<b>ThinkPad T500 2087</b>
IBM / Lenovo	<b>ThinkPad T500 2088</b>
IBM / Lenovo	<b>ThinkPad T500 2089</b>
IBM / Lenovo	<b>ThinkPad T500 2241</b>
IBM / Lenovo	<b>ThinkPad T500 2242</b>
IBM / Lenovo	<b>ThinkPad T500 2243</b>
IBM / Lenovo	<b>ThinkPad T500 2246</b>

## Datenblatt zu Notebook Akku VIS-53-T60L

IBM / Lenovo	<b>ThinkPad T500 2247</b>
IBM / Lenovo	<b>ThinkPad T500 2261</b>
IBM / Lenovo	<b>ThinkPad T60 1951</b>
IBM / Lenovo	<b>ThinkPad T60 1952</b>
IBM / Lenovo	<b>ThinkPad T60 1953</b>
IBM / Lenovo	<b>ThinkPad T60 1954</b>
IBM / Lenovo	<b>ThinkPad T60 1955</b>
IBM / Lenovo	<b>ThinkPad T60 1956</b>
IBM / Lenovo	<b>ThinkPad T60 2007</b>
IBM / Lenovo	<b>ThinkPad T60 2008</b>
IBM / Lenovo	<b>ThinkPad T60 2009</b>
IBM / Lenovo	<b>ThinkPad T60 2613</b>
IBM / Lenovo	<b>ThinkPad T60 2623</b>
IBM / Lenovo	<b>ThinkPad T60 2637</b>
IBM / Lenovo	<b>ThinkPad T60 6369</b>
IBM / Lenovo	<b>ThinkPad T60 6370</b>
IBM / Lenovo	<b>ThinkPad T60 6371</b>
IBM / Lenovo	<b>ThinkPad T60 6372</b>
IBM / Lenovo	<b>ThinkPad T60 6373</b>
IBM / Lenovo	<b>ThinkPad T60 6374</b>
IBM / Lenovo	<b>ThinkPad T60 8741</b>
IBM / Lenovo	<b>ThinkPad T60 8742</b>
IBM / Lenovo	<b>ThinkPad T60 8743</b>
IBM / Lenovo	<b>ThinkPad T60 8744</b>
IBM / Lenovo	<b>ThinkPad T60 8745</b>
IBM / Lenovo	<b>ThinkPad T60 8746</b>
IBM / Lenovo	<b>ThinkPad T60p 1952</b>
IBM / Lenovo	<b>ThinkPad T60p 2007</b>
IBM / Lenovo	<b>ThinkPad T60p 2008</b>
IBM / Lenovo	<b>ThinkPad T60p 2009</b>
IBM / Lenovo	<b>ThinkPad T60p 2613</b>
IBM / Lenovo	<b>ThinkPad T60p 2623</b>

## Datenblatt zu Notebook Akku VIS-53-T60L

IBM / Lenovo	<b>ThinkPad T60p 2637</b>
IBM / Lenovo	<b>ThinkPad T60p 8741</b>
IBM / Lenovo	<b>ThinkPad T60p 8742</b>
IBM / Lenovo	<b>ThinkPad T60p 8743</b>
IBM / Lenovo	<b>ThinkPad T60p 8744</b>
IBM / Lenovo	<b>ThinkPad T60p 8745</b>
IBM / Lenovo	<b>ThinkPad T60p 8746</b>
IBM / Lenovo	<b>ThinkPad T61 6457</b>
IBM / Lenovo	<b>ThinkPad T61 6458</b>
IBM / Lenovo	<b>ThinkPad T61 6459</b>
IBM / Lenovo	<b>ThinkPad T61 6460</b>
IBM / Lenovo	<b>ThinkPad T61 6461</b>
IBM / Lenovo	<b>ThinkPad T61 6462</b>
IBM / Lenovo	<b>ThinkPad T61 6463</b>
IBM / Lenovo	<b>ThinkPad T61 6464</b>
IBM / Lenovo	<b>ThinkPad T61 6465</b>
IBM / Lenovo	<b>ThinkPad T61 6466</b>
IBM / Lenovo	<b>ThinkPad T61 6467</b>
IBM / Lenovo	<b>ThinkPad T61 6468</b>
IBM / Lenovo	<b>ThinkPad T61 6470</b>
IBM / Lenovo	<b>ThinkPad T61 6471</b>
IBM / Lenovo	<b>ThinkPad T61 8889</b>
IBM / Lenovo	<b>ThinkPad T61 8890</b>
IBM / Lenovo	<b>ThinkPad T61 8891</b>
IBM / Lenovo	<b>ThinkPad T61 8892</b>
IBM / Lenovo	<b>ThinkPad T61 8893</b>
IBM / Lenovo	<b>ThinkPad T61 8894</b>
IBM / Lenovo	<b>ThinkPad T61 8895</b>
IBM / Lenovo	<b>ThinkPad T61 8896</b>
IBM / Lenovo	<b>ThinkPad T61 8897</b>
IBM / Lenovo	<b>ThinkPad T61 8898</b>
IBM / Lenovo	<b>ThinkPad T61 8899</b>

## Datenblatt zu Notebook Akku VIS-53-T60L

IBM / Lenovo	<b>ThinkPad T61 8900</b>
IBM / Lenovo	<b>ThinkPad T61 8938</b>
IBM / Lenovo	<b>ThinkPad T61 8939</b>
IBM / Lenovo	<b>ThinkPad T61P 6457</b>
IBM / Lenovo	<b>ThinkPad T61p 6458</b>
IBM / Lenovo	<b>ThinkPad T61p 6459</b>
IBM / Lenovo	<b>ThinkPad T61P 6460</b>
IBM / Lenovo	<b>ThinkPad T61P 6461</b>
IBM / Lenovo	<b>ThinkPad T61P 6462</b>
IBM / Lenovo	<b>ThinkPad T61P 6463</b>
IBM / Lenovo	<b>ThinkPad T61P 6470</b>
IBM / Lenovo	<b>ThinkPad T61p 8889</b>
IBM / Lenovo	<b>ThinkPad T61p 8890</b>
IBM / Lenovo	<b>ThinkPad T61p 8891</b>
IBM / Lenovo	<b>ThinkPad T61p 8892</b>
IBM / Lenovo	<b>ThinkPad W500 4058</b>
IBM / Lenovo	<b>ThinkPad W500 4061</b>
IBM / Lenovo	<b>ThinkPad W500 4062</b>
IBM / Lenovo	<b>ThinkPad W500 4063</b>
IBM / Lenovo	<b>ThinkPad W500 4064</b>
IBM / Lenovo	<b>ThinkPad W500 4065</b>